

## FOREWORD

This workshop manual has been prepared to provide information regarding repair procedures on Hino Vehicles.

Applicable for J08C-TI engine

When making any repairs on your vehicle, be careful not to be injured through improper procedures.

As for maintenance items, refer to the Operation Manual.

All information and specifications in this manual are based upon the latest product information available at the time of printing.

Hino Motors reserves the right to make changes at any time without prior notice.

**Hino Motors, Ltd.**

www.repairsadviser.com

# CHAPTER REFERENCES REGARDING THIS WORKSHOP MANUAL

Use this chart to the appropriate chapter numbers for servicing your particular vehicle.

CHAPTER	MANUAL NO.	S5-YJ08E17A	
	MODEL	J08C-TI	
GENERAL INTRODUCTION		GN01-001	
ENGINE INTRODUCTION		EN01-001	
ENGINE MECHANICAL		EN02-001	
AIR INTAKE SYSTEM		EN03-001	
EXHAUST SYSTEM		EN04-001	
LUBRICATING SYSTEM		EN05-001	
COOLING SYSTEM		EN06-001	
FUEL SYSTEM		EN07-001	
TURBOCHARGER		EN08-001	
ALTERNATOR		EN11-001	EN11-002
STARTER		EN12-001	
AIR COMPRESSOR		EN13-001	EN13-002
ENGINE P.T.O. (POWER TAKE-OFF)		EN14-001	
FUEL CONTROL		DN02-001	DN02-002

# HINO

INDEX: ENGINE GROUP 1/2

# WORKSHOP MANUAL

**GENERAL INTRODUCTION**

**ENGINE INTRODUCTION**

**ENGINE MECHANICAL**

**AIR INTAKE SYSTEM**

**EXHAUST SYSTEM**

**LUBRICATING SYSTEM**

**COOLING SYSTEM**

**FUEL SYSTEM**

**TURBOCHARGER**

**FUEL INJECTION PUMP**

**EMISSION CONTROL**

**ALTERNATOR**

**STARTER**

**AIR COMPRESSOR**

**ENGINE PTO  
(POWER TAKE-OFF)**

**ENGINE RETARDER**

**ENGINE CONTROL**

**Hino Motors, Ltd.**

All rights reserved. This manual may not be reproduced or copied in whole in part, without the written consent of Hino Motors, Ltd.

INDEX: ENGINE GROUP 2/2

**ENGINE CONTROL**

**FUEL CONTROL**

**BRAKE CONTROL**

**SUSPENSION CONTROL**

**CAB EQUIPMENT CONTROL**

**OTHERS**

[www.repairsadviser.com](http://www.repairsadviser.com)

# GENERAL INTRODUCTION (ENGINE)

GN01-001

## GENERAL INTRODUCTION (ENGINE) ...GN01-2

GENERAL PRECAUTIONS .....GN01-2

HOW TO USE THIS WORKSHOP MANUAL...GN01-3

IDENTIFICATION INFORMATION .....GN01-5

SPECIFIED TORQUE FOR STANDARD BOLTS AND  
NUTS .....GN01-5

DISMOUNTING AND MOUNTING .....GN01-6

[www.repairsadviser.com](http://www.repairsadviser.com)

This and other manuals you can download on the site:  
[www.repairsadviser.com/Hino-J08C-TI-Engine-Workshop-Manual-PDF](http://www.repairsadviser.com/Hino-J08C-TI-Engine-Workshop-Manual-PDF)