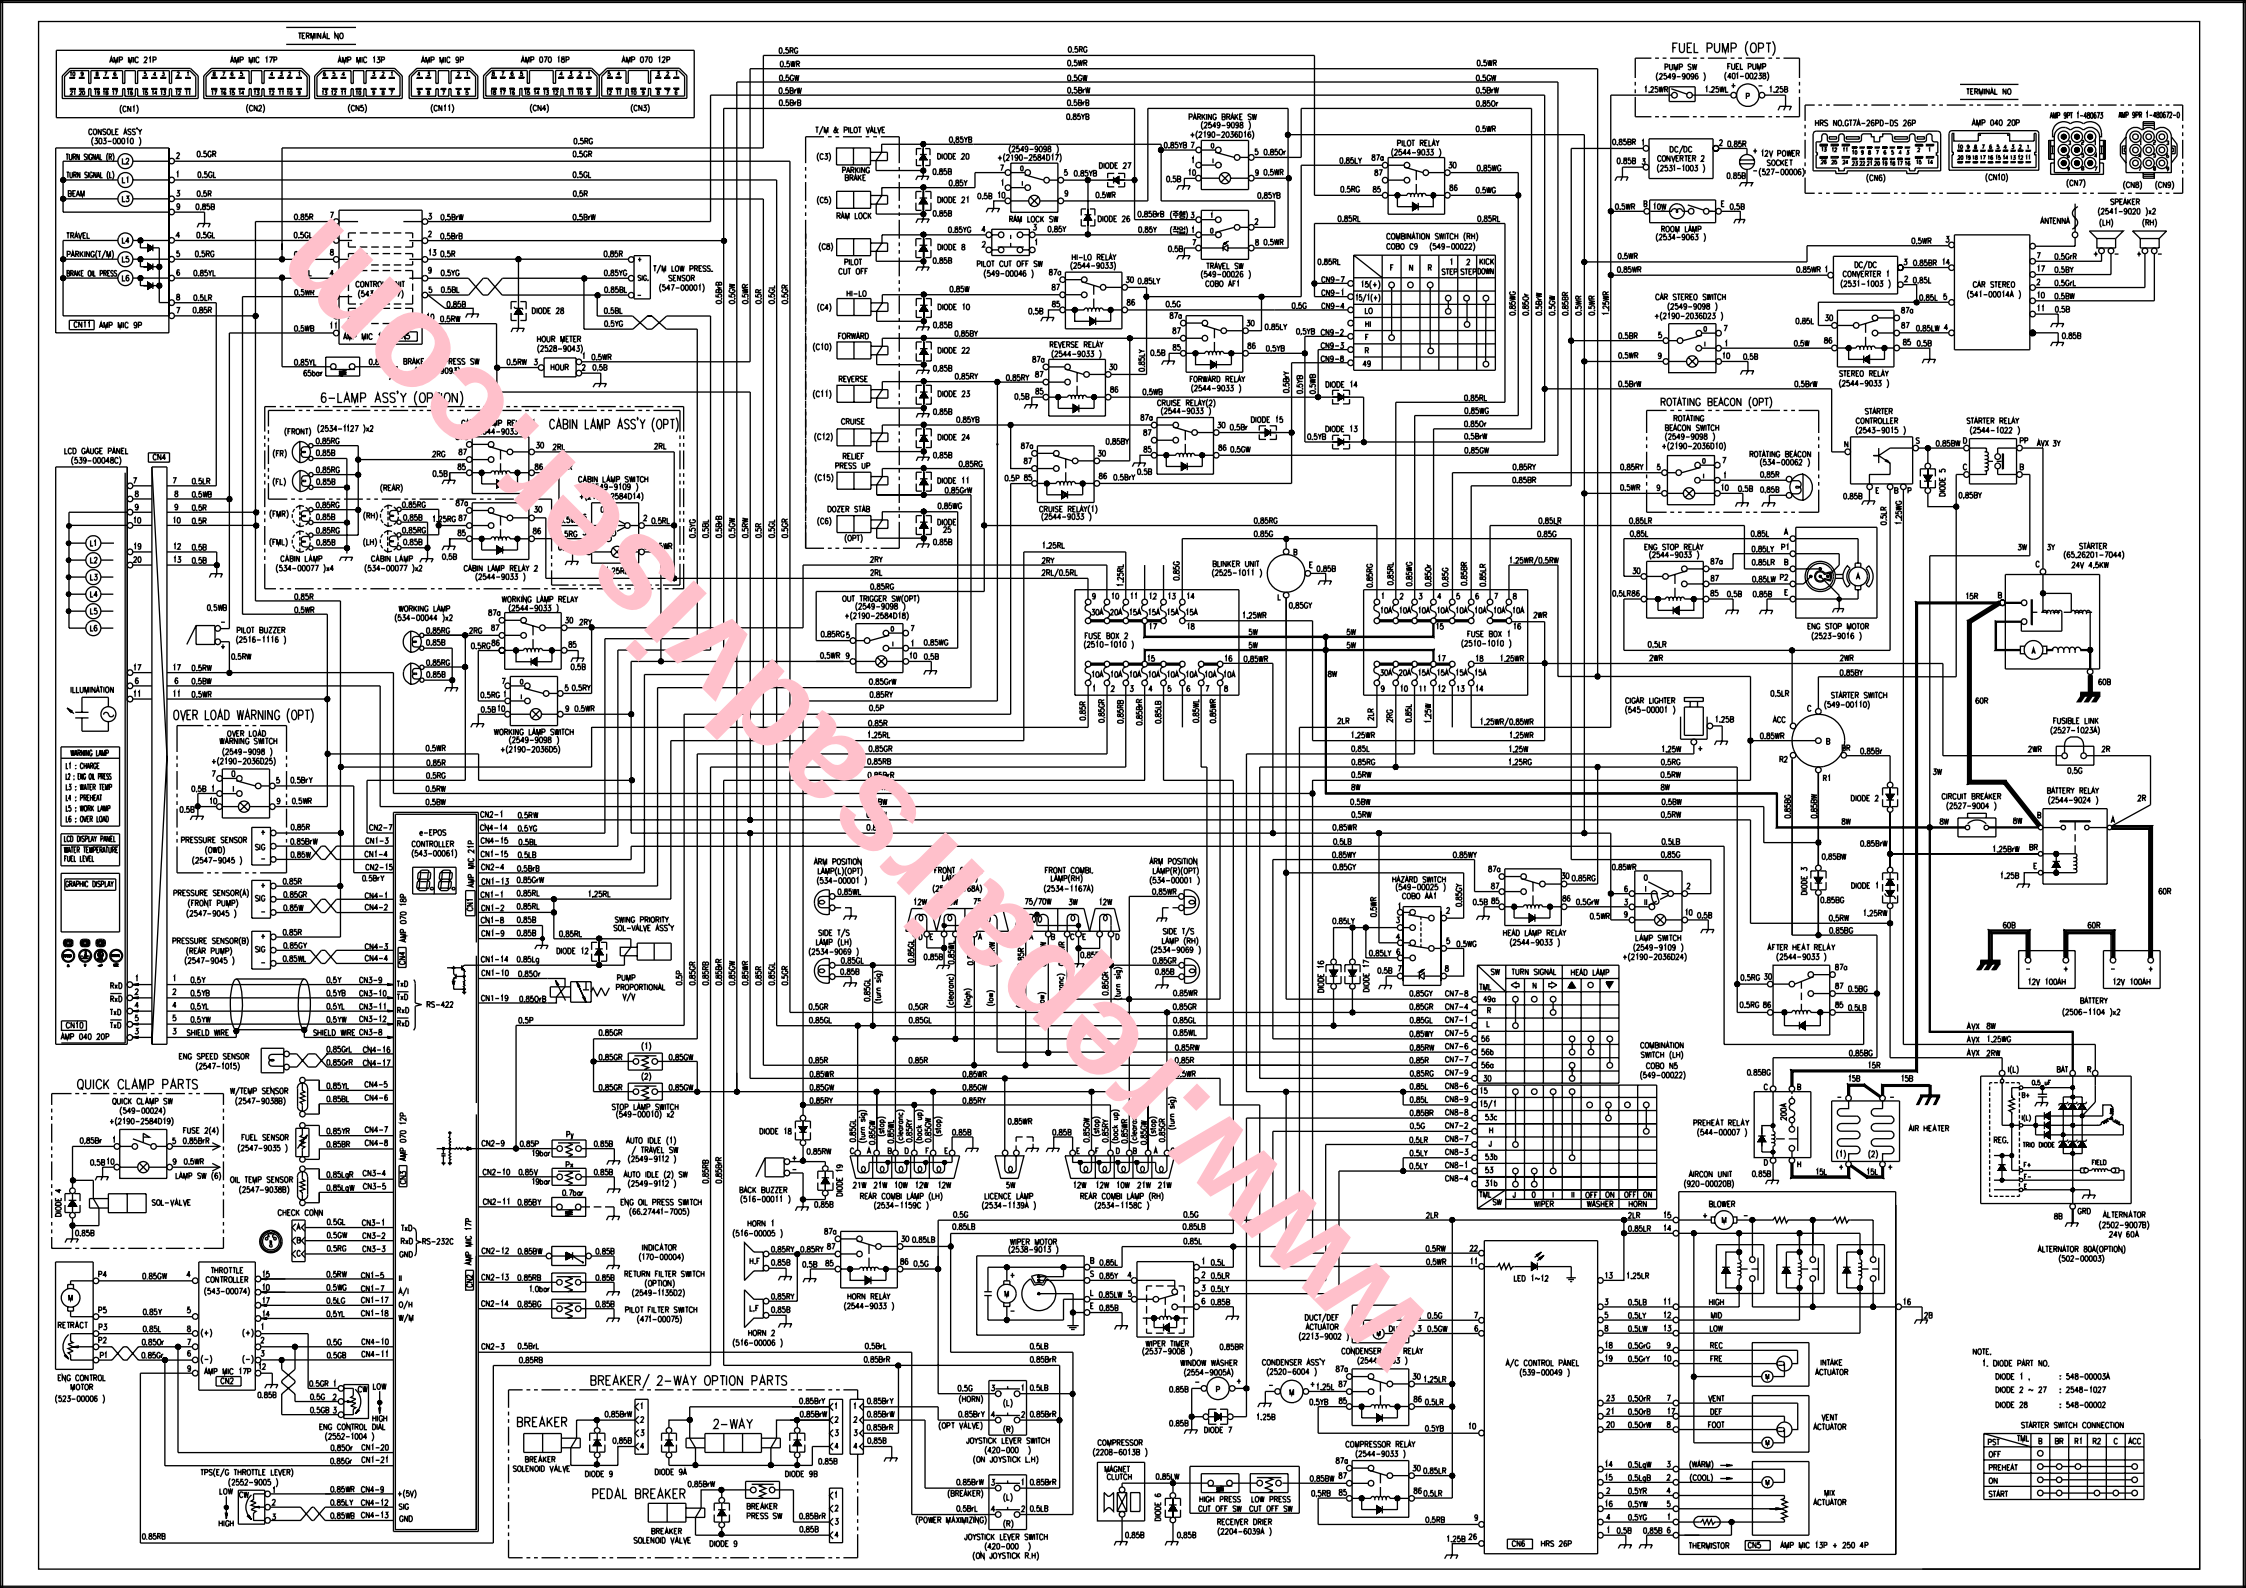
TERMINAL NO
AMP MIC 21P
AMP MIC 17P
AMP MIC 13P
AMP MIC 9P
AMP 070 18P
AMP 070 12P
(CN1)
(CN2)
(CN5)
(CN11)
(CN4)
(CN3)
CONSOLE ASS'Y (303-00010)
CN11 AMP MIC 9P
6-LAMP ASS'Y (OPTION)
CABIN LAMP ASS'Y (OPT)
LCD GAUGE PANEL (539-00048C)
CN4
CN10 AMP 040 20P
ILLUMINATION
OVER LOAD WARNING (OPT)
WARNING LAMP
L1 : CHARGE
L2 : ENG OIL PRESS
L3 : WATER TEMP
L4 : PREHEAT
L5 : WORK LAMP
L6 : OVER LOAD
LCD DISPLAY PANEL
WATER TEMPERATURE
FUEL LEVEL
GRAPHIC DISPLAY
PILOT BUZZER (2516-1116)
WORKING LAMP (534-00044)x2
WORKING LAMP RELAY (2544-9033)
WORKING LAMP SWITCH (2549-9098) +(2190-2036D5)
OVER LOAD WARNING SWITCH (2549-9098) +(2190-2036D25)
PRESSURE SENSOR (OWD) (2547-9045)
PRESSURE SENSOR(A) (FRONT PUMP) (2547-9045)
PRESSURE SENSOR(B) (REAR PUMP) (2547-9045)
ENG SPEED SENSOR (2547-1015)
W/TEMP SENSOR (2547-9038B)
FUEL SENSOR (2547-9035)
OIL TEMP SENSOR (2547-9038B)
QUICK CLAMP PARTS
QUICK CLAMP SW (549-00024) +(2190-2584019)
FUSE 2(4)
LAMP SW (6)
SOL-VALVE
CHECK CONN
THROTTLE CONTROLLER (2552-9005) (543-00074)
AMP MIC 17P
CN2
ENG CONTROL MOTOR (523-00006)
ENG CONTROL DIAL (2552-1004)
TPS(E/G THROTTLE LEVER)
e-EPOS CONTROLLER (543-00061)
AMP MIC 21P
AMP 070 18P
AMP 070 12P
RS-422
RS-232C
SWING PRIORITY SOL-VALVE ASS'Y
PUMP PROPORTIONAL V/V
STOP LAMP SWITCH (549-00010) x2
AUTO IDLE (1) / TRAVEL SW (2549-9112)
AUTO IDLE (2) SW (2549-9112)
ENG OIL PRESS SWITCH (66.27441-7005)
INDICATOR (170-00004)
RETURN FILTER SWITCH (OPTION) (2549-115502)
PILOT FILTER SWITCH (471-00075)
BREAKER/ 2-WAY OPTION PARTS
BREAKER
BREAKER SOLENOID VALVE
DIODE 9
2-WAY
DIODE 9A
DIODE 9B
PEDAL BREAKER
BREAKER PRESS SW
T/M & PILOT VALVE
PARKING BRAKE
RAM LOCK
PILOT CUT OFF
HI-LO
FORWARD
REVERSE
CRUISE
RELIEF PRESS UP
DOZER STAB (OPT)
DIODE 20
DIODE 21
DIODE 8
DIODE 10
DIODE 22
DIODE 23
DIODE 24
DIODE 11
DIODE 25
DIODE 26
DIODE 27
DIODE 28
PILOT CUT OFF SW (549-00046)
T/M LOW PRESS. SENSOR (547-00001)
HOUR METER (2528-9043)
PARKING BRAKE SW (2549-9098) +(2190-2036D16)
TRAVEL SW (549-00026) COBO AF1
HI-LO RELAY (2544-9033)
REVERSE RELAY (2544-9033)
FORWARD RELAY (2544-9033)
CRUISE RELAY(2) (2544-9033)
CRUISE RELAY(1) (2544-9033)
DIODE 14
DIODE 13
DIODE f5
OUT TRIGGER SW(OPT) (2549-9098) +(2190-2584D18)
FUSE BOX 2 (2510-1010)
FUSE BOX 1 (2510-1010)
BLINKER UNIT (2525-1011)
PILOT RELAY (2544-9033)
COMBINATION SWITCH (RH) COBO C9 (549-00022)
FUEL PUMP (OPT)
PUMP SW (2549-9096)
FUEL PUMP (401-00238)
DC/DC CONVERTER 2 (2531-1003)
+ 12V POWER SOCKET (527-00006)
ROOM LAMP (2534-9063)
CAR STEREO SWITCH (2549-9098) +(2190-2036D23)
DC/DC CONVERTER 1 (2531-1003)
CAR STEREO (541-00014A)
STEREO RELAY (2544-9033)
ANTENNA
SPEAKER (2541-9020)x2 (LH) (RH)
ROTATING BEACON (OPT)
ROTATING BEACON SWITCH (2549-9098) +(2190-2036D10)
ROTATING BEACON (534-00062)
STARTER CONTROLLER (2543-9015)
STARTER RELAY (2544-1022)
DIODE 5
ENG STOP RELAY (2544-9033)
ENG STOP MOTOR (2523-9016)
STARTER (65.26201-7044) 24V 4.5KW
CIGAR LIGHTER (545-00001)
STARTER SWITCH (549-00110)
FUSIBLE LINK (2527-1023A)
CIRCUIT BREAKER (2527-9004)
BATTERY RELAY (2544-9024)
DIODE 2
DIODE 3
DIODE 1
HEAD LAMP RELAY (2544-9033)
HAZARD SWITCH (549-00025) COBO AA1
LAMP SWITCH (2549-9109) +(2190-2036D24)
AFTER HEAT RELAY (2544-9033)
BATTERY (2506-1104)x2
12V 100AH
ARM POSITION LAMP(L)(OPT) (534-00001)
ARM POSITION LAMP(R)(OPT) (534-00001)
SIDE T/S LAMP (LH) (2534-9069)
SIDE T/S LAMP (RH) (2534-9069)
FRONT COMBI LAMP(LH) (2534-1167A)
FRONT COMBI LAMP(RH) (2534-1167A)
REAR COMBI LAMP (LH) (2534-1159C)
REAR COMBI LAMP (RH) (2534-1158C)
LICENCE LAMP (2534-1139A)
BACK BUZZER (516-00011)
HORN 1 (516-00005)
HORN 2 (516-00006)
HORN RELAY (2544-9033)
WIPER MOTOR (2538-9013)
WIPER TIMER (2537-9008)
WINDOW WASHER (2554-9005A)
COMBINATION SWITCH (LH) COBO N5 (549-00022)
PREHEAT RELAY (544-00007)
AIR HEATER
REG.
TRIO DIODE
FIELD
ALTERNATOR (2502-9007B) 24V 60A
ALTERNATOR BOA(OPTION) (502-00003)
AIRCON UNIT (920-00020B)
BLOWER
A/C CONTROL PANEL (539-00049)
LED 1~12
DUCT/DEF ACTUATOR (2213-9002)
CONDENSER ASSY (2520-6004)
CONDENSER RELAY (2544-9033)
COMPRESSOR (2208-6013B)
COMPRESSOR RELAY (2544-9033)
MAGNET CLUTCH
HIGH PRESS CUT OFF SW
LOW PRESS CUT OFF SW
RECEIVER DRIER (2204-6039A)
JOYSTICK LEVER SWITCH (420-000) (ON JOYSTICK L.H)
JOYSTICK LEVER SWITCH (420-000) (ON JOYSTICK R.H)
INTAKE ACTUATOR
VENT ACTUATOR
MIX ACTUATOR
THERMISTOR
CN6 HRS 26P
CN5 AMP MIC 13P + 250 4P
HRS NO.G17A-26PD-DS 26P
AMP 040 20P
AMP 9PT 1-480675
AMP 9PR 1-480672-0
(CN6)
(CN10)
(CN7)
(CN8)
(CN9)
NOTE.
1. DIODE PART NO.
DIODE 1 , : 548-00003A
DIODE 2 ~ 27 : 2548-1027
DIODE 28 : 548-00002
STARTER SWITCH CONNECTION
PST
TML
B
BR
R1
R2
C
ACC
OFF
PREHEAT
ON
START

This and other manuals you can download on the site:
www.repairsadviser.com/Doosan-S140W-V-Wheel-Excavator-Schemes-Set-PDF