337
341

Bobcat®

G-Series Parts Manual

337G (2346 11001 & Above)
341G (2347 11001 & Above)

PRELIMINARY

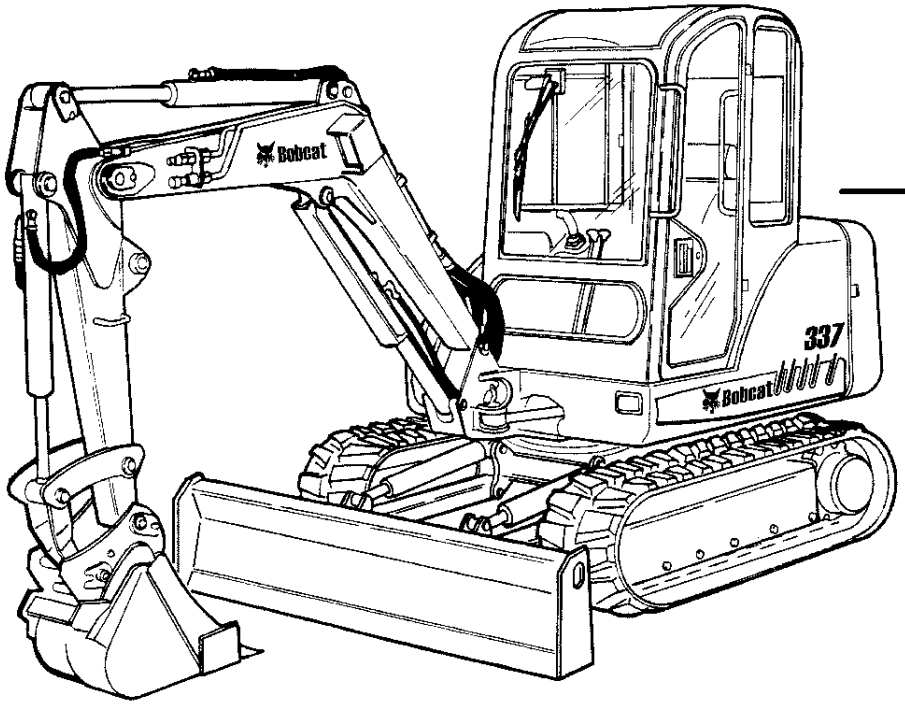

www.repairsadviser.com

IR Bobcat

6902790 (11-03)

Printed in U.S.A.

B-19945

© Bobcat Company 2003

337G/341G-SERIES CONTENTS

MAINTENANCE ITEMS 9-12
MAINTENANCE ITEMS 9-10
SERVICE SCHEDULE ITEMS 10-12
MAIN FRAME 13-38
UPPERSTRUCTURE 13-14
COUNTERWEIGHT 15-16
R.H. COVER 17-18
TAILGATE 19-20
OPERATOR CAB 21-22
OPERATOR AREA & SEAT 23-24
OPERATOR CAB 25-28
SEAT 29-30
CONTROLS - BLADE 31-32
CONTROLS - OFFSET 33-34
CONTROLS - TRAVEL 35-36
INSULATION 37-38
UNDERCARRIAGE 39-52
UNDERCARRIAGE 39-40
RECOIL SPRING 41-44
FRONT IDLER 45-46
TRACK ROLLER 47-50
TRACKS 51-52
WORK EQUIPMENT 53-60
SWING BRACKET 53-54
ARM & BUCKET LINK 55-56
BOOM 57-58
BLADE 59-60
CONTROL CONSOLE 61-66
R.H. CONSOLE 61-62
L.H. CONSOLE 63-64
CONTROLS 65-66
HYDRAULIC CIRCUITRY 67-134
HYDRAULIC CIRCUITRY 67-78
HYDRAULIC VALVE 79-80
HYDRAULIC CIRCUITRY 81-88
SELECTOR VALVE ASSY 89-90
HYDRAULIC CIRCUITRY 91-92
HYDROSTATIC PUMP 93-96
CONTROL VALVE 97-98
TRAVEL CONTROLLER 99-100
R.H. JOYSTICK 101-102
L.H. JOYSTICK 103-104
SELECTOR VALVE 105-106
LOCK VALVE 107-108
SEQUENCE VALVE 109-110
SWIVEL JOINT 111-112
TRAVEL MOTOR 113-116
MOUNT ASSY 117-118
RELIEF/BRAKE VALVE 119-120
SWING MOTOR 121-122
ARM CYLINDER 123-124
BLADE CYLINDER 125-126
BOOM CYLINDER 127-128
BUCKET CYLINDER 129-130
SWING CYLINDER 131-132
CLAMP CYLINDER 133-134
ELECTRICAL 135-142
ALTERNATOR 135-136
STARTER 137-138
ELECTRICAL 139-140
CAB ELECTRICAL 141-142
POWER UNIT 143-212
ENGINE & ATTACHING PARTS 143-146
CRANKCASE 147-148
OIL PAN 149-150

www.repairsadviser.com

POWER UNIT (CONT'D) **143-212**
CYLINDER HEAD 151-152
GEAR CASE 153-154
HEAD COVER 155-156
OIL FILTER 157-158
DIPSTICK & GUIDE 159-160
OIL PUMP 161-162
OIL FLANGE 163-164
MAIN BEARING CASE 165-166
CAMSHAFT & IDLE GEAR SHAFT 167-168
PISTON & CAMSHAFT 169-170
FUEL CAMSHAFT & GOVERNOR SHAFT 171-172
IDLE APPARATUS 173-174
STOP SOLENOID 175-176
INJECTION PUMP 177-178
SPEED CONTROL PLATE 179-180
NOZZLE HOLDER & GLOW PLUG 181-182
GOVERNOR 183-184
FUEL PUMP 185-186
ALTERNATOR & PULLEY 187-188
OIL SWITCH/THERMOMETER & PLUG 189-190
WATER FLANGE & THERMOSTAT 191-192
WATER PUMP 193-194
FAN 195-196
VALVE & ROCKER ARM 197-198
INLET MANIFOLD 199-200
EXHAUST MANIFOLD 201-202
TURBO CHARGER 203-204
OIL PIPE 205-206
OIL COOLER 207-208
FUEL SYSTEM 209-210
AIR CLEANER 211-212
ACCESSORIES **216-319**
AUGER 216-229
AUGER - HYDRAULIC MOTOR 230-235
BREAKER TOOLS 236-239
CLAMP 240-241
COMPACTOR 241-245
CUTTER CRUSHER 246-265
DECALS 266-267
DIRECT TO TAIL 268-269
HEATER 270-271
HYDRAULIC TILT 272-275
HYDRAULIC BREAKER (MODEL 5060) 276-277
HYDRAULIC BREAKER CRADLE & MOUNT 278-279
HYDRAULIC BREAKER HOSES 280-281
HYDRAULIC BREAKER MOUNTING FRAME 282-283
HYDRAULIC BREAKER (MODEL 6560) 284-287
KEYLESS IGNITION KIT 288-289
LONG ARM KIT 290-291
MOTION ALARM KIT 292-293
PACKER WHEEL 294-295
POWERTILT 296-299
RIPPER 300-301
STEEL TRACK KIT 302-303
VINYL CAB ENCLOSURE KIT 304-305
WIDE LINK KIT 306-307
X-CHANGE BREAKER MOUNTING KIT 308-309
X-CHANGE MOUNTED ONLY 310-311
X-CHANGE HYDRAULIC BREAKER 312-313
X-CHANGE MOUNTED BUCKET 314-315
X-CHANGE BUCKTET 316-317
BULK ITEMS 317-319
NUMERICAL INDEX **320-364**
NUMERICAL INDEX 320-364

www.repairsadviser.com

337G/341G-SERIES CONTENTS

MAINTENANCE ITEMS 9-12
MAINTENANCE ITEMS 9-10
MAINTENANCE SCHEDULE 11-12
MAIN FRAME 13-38
UPPERSTRUCTURE 13-14
COUNTERWEIGHT 15-16
R.H. COVER 17-18
TAILGATE 19-20
OPERATOR CAB 21-22
OPERATOR AREA & SEAT 23-24
OPERATOR CAB 25-28
SEAT 29-30
CONTROLS - BLADE 31-32
CONTROLS - OFFSET 33-34
CONTROLS - TRAVEL 35-36
INSULATION 37-38
UNDERCARRIAGE 39-52
UNDERCARRIAGE 39-40
RECOIL SPRING 41-44
FRONT IDLER 45-46
TRACK ROLLER 47-50
TRACKS 51-52
WORK EQUIPMENT 53-60
SWING BRACKET 53-54
ARM & BUCKET LINK 55-56
BOOM 57-58
BLADE 59-60
CONTROL CONSOLE 61-66
R.H. CONSOLE 61-62
L.H. CONSOLE 63-64
CONTROLS 65-66
HYDRAULIC CIRCUITRY 67-134
HYDRAULIC CIRCUITRY 67-78
HYDRAULIC VALVE 79-80
HYDRAULIC CIRCUITRY 81-88
SELECTOR VALVE ASSY 89-90
HYDRAULIC CIRCUITRY 91-92
HYDROSTATIC PUMP 93-96
CONTROL VALVE 97-98
TRAVEL CONTROLLER 99-100
R.H. JOYSTICK 101-102
L.H. JOYSTICK 103-104
SELECTOR VALVE 105-106
LOCK VALVE 107-108
SEQUENCE VALVE 109-110
SWIVEL JOINT 111-112
TRAVEL MOTOR 113-116
MOUNT ASSY 117-118
RELIEF/BRAKE VALVE 119-120
SWING MOTOR 121-122
ARM CYLINDER 123-124
BLADE CYLINDER 125-126
BOOM CYLINDER 127-128
BUCKET CYLINDER 129-130
SWING CYLINDER 131-132
CLAMP CYLINDER 133-134
ELECTRICAL 135-142
ALTERNATOR 135-136
STARTER 137-138
ELECTRICAL 139-140
CAB ELECTRICAL 141-142
POWER UNIT 143-212
ENGINE & ATTACHING PARTS 143-146
CRANKCASE 147-148
OIL PAN 149-150

www.repairsadviser.com

337G/341G-SERIES CONTENTS (Cont'd)

POWER UNIT (CONT'D) **143-212**
- CYLINDER HEAD 151-152
- GEAR CASE 153-154
- HEAD COVER 155-156
- OIL FILTER 157-158
- DIPSTICK & GUIDE 159-160
- OIL PUMP 161-162
- OIL FLANGE 163-164
- MAIN BEARING CASE 165-167
- CAMSHAFT & IDLE GEAR SHAFT 168-169
- PISTON & CAMSHAFT 170-171
- FUEL CAMSHAFT & GOVERNOR SHAFT 171-172
- IDLE APPARATUS 173-174
- STOP SOLENOID 175-176
- INJECTION PUMP 177-178
- SPEED CONTROL PLATE 179-180
- NOZZLE HOLDER & GLOW PLUG 181-182
- GOVERNOR 183-184
- FUEL PUMP 185-186
- ALTERNATOR & PULLEY 187-188
- OIL SWITCH/THERMOMETER & PLUG 189-190
- WATER FLANGE & THERMOSTAT 191-192
- WATER PUMP 193-194
- FAN 195-196
- VALVE & ROCKER ARM 197-198
- INLET MANIFOLD 199-200
- EXHAUST MANIFOLD 201-202
- TURBO CHARGER 203-204
- OIL PIPE 205-206
- OIL COOLER 207-208
- FUEL SYSTEM 209-210
- AIR CLEANER 211-212

ACCESSORIES **216-319**
- AUGER 216-229
- AUGER - HYDRAULIC MOTOR 230-235
- BREAKER TOOLS 236-239
- CLAMP 240-241
- COMPACTOR 241-245
- CUTTER CRUSHER 246-265
- DECALS 266-267
- DIRECT TO TAIN 268-269
- HEATER 270-271
- HYDRAULIC TILT 272-275
- HYDRAULIC BREAKER (MODEL 5060) 276-277
- HYDRAULIC BREAKER CRADLE & MOUNT 278-279
- HYDRAULIC BREAKER HOSES 280-281
- HYDRAULIC BREAKER MOUNTING FRAME 282-283
- HYDRAULIC BREAKER (MODEL 6560) 284-287
- KEYLESS IGNITION KIT 288-289
- LONG ARM KIT 290-291
- MOTION ALARM KIT 292-293
- PACKER WHEEL 294-295
- POWERTILT 296-299
- RIPPER 300-301
- STEEL TRACK KIT 302-303
- VINYL CAB ENCLOSURE KIT 304-305
- WIDE LINK KIT 306-307
- X-CHANGE BREAKER MOUNTING KIT 308-309
- X-CHANGE MOUNTED ONLY 310-311
- X-CHANGE HYDRAULIC BREAKER 312-313
- X-CHANGE MOUNTED BUCKET 314-315
- X-CHANGE BUCKTET 316-317
- BULK ITEMS 317-319

NUMERICAL INDEX **320-364**
- NUMERICAL INDEX 320-364

www.repairsadviser.com

This and other manuals you can download on the site:
www.repairsadviser.com/Bobcat-337-341-G-Series-Preliminary-Excavator-Parts-Manual-PDF