763

763

HIGH FLOW

Bobcat®

Service Manual

S/N 512212001 thru 512249999
S/N 512440001 thru 512449999
S/N 512612001 thru 512619999

www.repairsadviser.com

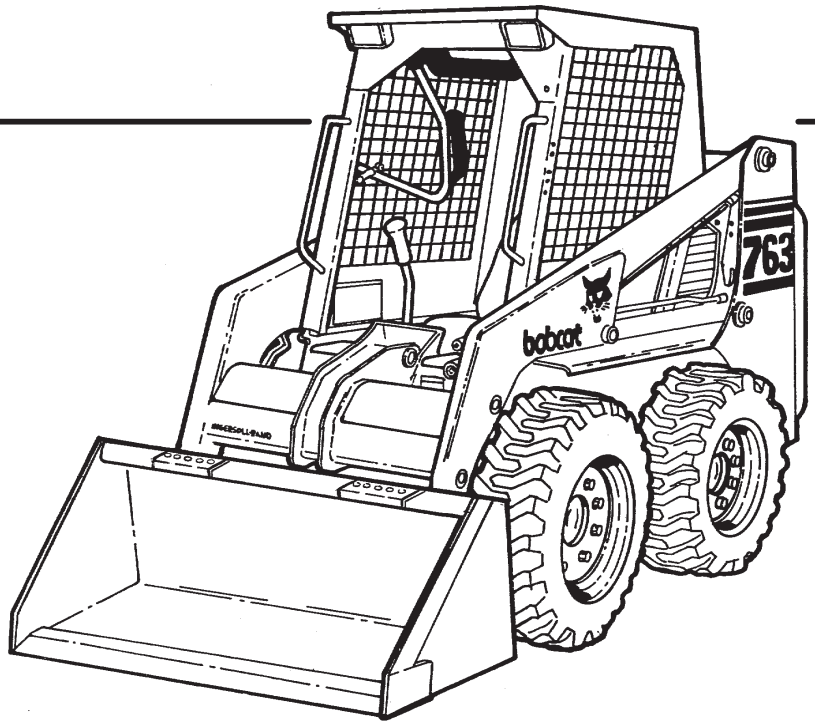

EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)

6900091 (6–97)

Bobcat®
Printed in U.S.A.

© Bobcat Company 1997

www.repairsadviser.com

MAINTENANCE SAFETY

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

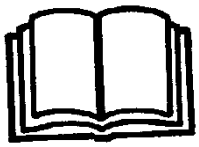

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

CORRECT

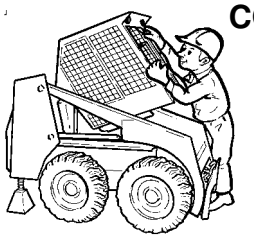

B-12360

Use the correct procedure to lift or lower operator cab.

CORRECT

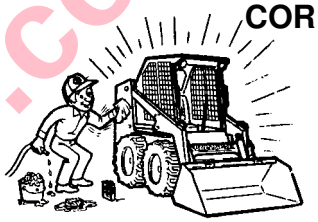

B-7469

Cleaning and maintenance are required daily.

WRONG

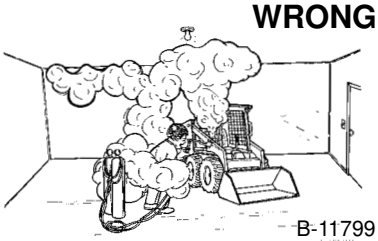

B-11799

Have good ventilation when welding or grinding painted parts.

Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG

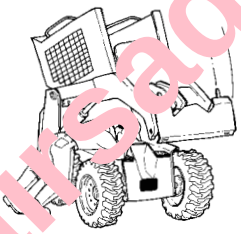

B-15231

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

WRONG

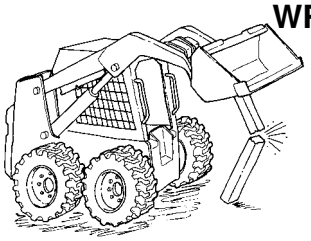

B-15280

Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.

Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

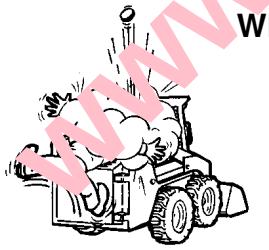

B-6590

Stop, cool and clean engine of flammable materials before checking fluids.

Never service or adjust loader with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG

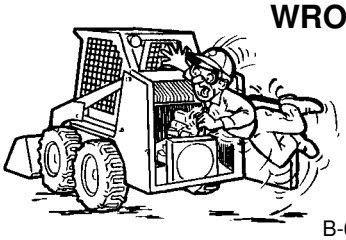

B-6580

Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG

B-6589

Lead-acid batteries produce flammable and explosive gases.

Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL. Always use genuine Bobcat replacement parts.** The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805

www.repairsadviser.com

www.repairsadviser.com

ALPHABETICAL INDEX

ACTUATORS 10–1
ACTUATOR VOLTAGE TEST 10–1
A.H.C. COMPONENTS 10–1
A.H.C./PWM CONTROLLER 10–1
A.H.C. HANDLE 10–1
A.H.C. STEERING LEVER 10–1
AIR CLEANER 7–1
AIR CLEANER SERVICE 1–1
ALTERNATOR 6–1
ALTERNATOR BELT 1–1
AXLE SEAL 4–1
AXLE, SPROCKET AND BEARINGS 4–1

BATTERY 6–1
BICS™ SYSTEM CONTROLLER 8–1
BICS VALVE 2–1
BLOWER HOUSING/FAN GEARBOX 7–1
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™) 8–1, 10–1
BOB–TACH 1–1, 5–1
BOSS® DIAGNOSTIC TOOL 8–1
BOSS® INSTRUMENT PANEL 8–1

CHAINCASE COVERS 4–1
CHAINCASE FLUID 4–1
CONTROL PANEL 3–1
CONTROL PEDALS 2–1
CRANKSHAFT AND BEARINGS 7–1
CRANKSHAFT GEAR 7–1
CYLINDER BORE 7–1
CYLINDER HEAD 7–1

DECIMAL & MILLIMETER EQUIVALENTS 9–1
DRIVE BELT 1–1
DRIVE BELT HOUSING 3–1
DRIVE CHAIN 4–1

ELECTRICAL/HYDRAULIC (CONTROL REF.) 8–1
ELECTRICAL SYSTEM INFORMATION 6–1
ENGINE 7–1
ENGINE COMPRESSION 7–1
ENGINE COOLING SYSTEM 1–1
ENGINE LUBRICATION SYSTEM 1–1
ENGINE MUFFLER 7–1
ENGINE SPECIFICATIONS 9–1
ENGINE SPEED CONTROL 7–1

FAN GEARBOX 1–1, 7–1
FINAL DRIVE TRANSMISSION (CHAINCASE) . . . 1–1
FIXED DRIVE BELT TENSIONER PULLEY 3–1
FLYWHEEL 7–1
FRONT LIGHTS 6–1
FUEL CAMSHAFT 7–1
FUEL INJECTION NOZZLES 7–1
FUEL INJECTION PUMP 7–1
FUEL SYSTEM 1–1
FUEL TANK 5–1

GLOW PLUGS 7–1

HANDLE CONTROL UNIT 10–1
HYDRAULIC CONTROL VALVE 2–1
HYDRAULIC CONTROL VALVE (AHC) 10–1
HYDRAULIC CYLINDER IDENTIFICATION 2–1
HYDRAULIC CYLINDERS 2–1
HYDRAULIC FILTER HOUSING 2–1
HYDRAULIC FLUID RESERVOIR 2–1
HYDRAULIC/HYDROSTATIC
FLUID SPECIFICATIONS 9–1
HYDRAULIC/HYDROSTATIC SYSTEM 1–1
HYDRAULIC PUMP 2–1
HYDRAULIC SYSTEM INFORMATION 9–1
HYDROSTATIC DRIVE MOTOR 3–1
HYDROSTATIC DRIVE MOTOR 30 SERIES 3–1
HYDROSTATIC PUMP 3–1
HYDROSTATIC SYSTEM INFORMATION 3–1

IDLER GEAR AND CAMSHAFT 7–1

LIFT ARM SUPPORT DEVICE 1–1
LIFT ARMS 5–1
LIFT CYLINDER(S) 2–1
LIFT LOCK BY–PASS VALVE 2–1
LIFTING AND BLOCKING THE LOADER 1–1
LIFTING THE LOADER 1–1
LOADER SPECIFICATIONS – 763 9–1
LUBRICATING THE LOADER 1–1

MONITOR SERVICE CODES 8–1
MOTOR CARRIER 4–1

OIL COOLER 3–1
OIL PUMP 7–1
OPERATOR CAB 1–1, 5–1
OPERATOR CAB GAS CYLINDER 5–1
OPERATOR SEAT 5–1

PARKING BRAKE 4–1
PARKING BRAKE DISC 4–1
PEDAL INTERLOCK LINKAGE 2–1
PISTON AND CONNECTING ROD 7–1

RADIATOR 7–1
REAR DOOR 5–1
REAR GRILL 5–1
REAR LIGHTS 5–1
RELAY SWITCHES 6–1
REMOTE START SWITCH 1–1
ROCKER ARM AND SHAFT 7–1
RPM SENSOR 8–1

SEAT BAR (W/COMPRESSION SPRINGS) 5–1
SEAT BAR (W/GAS CYLINDER) 5–1
SEAT BAR RESTRAINT SYSTEM 1–1
SEAT BAR SENSOR 8–1
SEAT SENSOR 8–1
SELECT VALVE (763H) 2–1
SENDER AND SENSOR 8–1
SERVICE SCHEDULE 1–1
SPARK ARRESTOR MUFFLER 1–1
SPRING LOADED DRIVE BELT TENSIONER
PULLEY 3–1
STANDARD INSTRUMENT PANEL 6–1
STANDARD TORQUE SPECIFICATIONS
FOR BOLTS 9–1
STARTER (DELCO REMY) 6–1
STARTER (DENSO) 6–1
STEERING LINKAGE 3–1
SWITCH HANDLE 10–1
STOPPING THE BOBCAT LOADER 1–1

TILT LOCK VALVE 2–1
TILT CYLINDER 2–1
TIMING GEARS 7–1
TIMING GEARCASE COVER 7–1
TIRE MAINTENANCE 1–1
TORQUE SPECIFICATIONS FOR LOADER 9–1
TOWING THE LOADER 1–1
TRACTION LOCK 8–1
TRACTION LOCK GUIDES 4–1
TRANSPORTING THE LOADER 1–1
TROUBLESHOOTING 2–1, 3–1, 6–1, 7–1, 10–1
TROUBLESHOOTING
THE BOSS® & L.C.D. DISPLAY 8–1

U.S. TO METRIC CONVERSION 9–1

VALVE, VALVE SEAT AND GUIDE 7–1

WATER PUMP 7–1

www.repairsadviser.com

This and other manuals you can download on the site:
www.repairsadviser.com/Bobcat-Loaders-763-763-High-Flow-Service-Manual-PDF